


SCENTLOK[®]

TECHNOLOGIES

1731 Wierengo Dr.
Muskegon, MI 49442
800.315.5799

©2018 ScentLok Technologies, Inc. | 050418

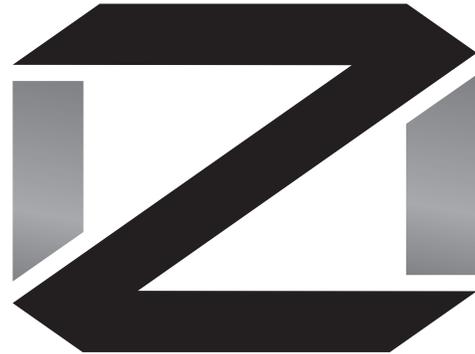

ACTIVE ODOR DESTROYER


82912-090 DC/12V

CE FC RoHS


OZ500

USER MANUAL


OZCHAMBER INSTALLATION INSTRUCTIONS

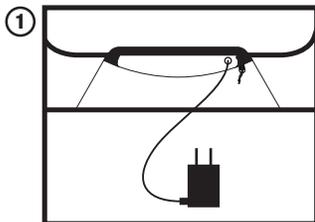


Feed the power cable through the rear power supply pocket.

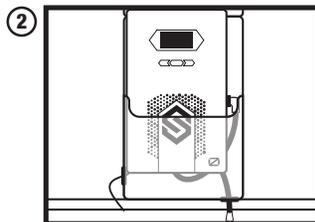

Connect plastic hose to orange elbow then connect elbow to the right side of the **OZ500**. Feed hose through bottom grommet of inner bag & connect to the nozzle inside the bag.

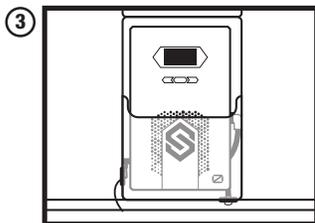

Secure the **OZ500** in the pocket then connect the power supply to the left side of the unit.

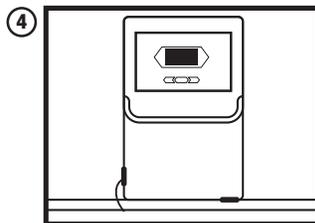

Close the cover & secure all velcro flaps.

WARRANTY

We guarantee our product within one year of purchase. Please register at ScentLok.com/RegisterOZ. The guarantee does not cover equipment which has been damaged due to abuse, misuse or accident, such as:

- use of incorrect line voltages;
- failure to follow the operating instructions that are provided by ScentLok Technologies;
- improper or unauthorized repair; or
- fire, flood, "acts of God," or other contingencies beyond the control of ScentLok Technologies.

OPERATING INSTRUCTIONS

The **OZ500** can either be used inside of an **OZChamber** to "dry wash" your gear or in large areas to seek and destroy unwanted odors. Use in unoccupied spaces only.

- Connect the **OZ500** to the power source and press the "ON/CYCLE" button twice for cycled ozone dispersion.
- Each press of the "MORE" button increases the timer by 5 minutes until the maximum 30 minutes is reached.
- Each press of the "LESS" button decreases the timer by 5 minutes until the timer goes down to 0 minutes.

NOTE: the resting period of each cycle is 60 minutes. The 60 minute rest cycle allows time for the ozone to dissipate and avoid overexposure.

WARNING

This product should only be used according to the instructions in this owner's manual. If used other than what has been specified here, serious injury may occur. The ozone unit is designed to be used in unoccupied spaces only. Upon entering a room that was treated with ozone you should ventilate the area allowing any possible lingering ozone to be cleared out. Never aim ozone directly into your face; it may cause eye irritation or other side effects. If entering a room where the unit was in use and the room is still filled with ozone (O_3 has not fully reverted back to O_2), it may cause mild headaches or irritation to the respiratory system. If this occurs, please exit the room immediately. If eyes continue to be irritated flush gently with water. If conditions continue seek medical attention. Keep away from children. Do not dismantle the ozone unit.

Depending on the concentration of bacteria and volume of odor, more than one cycle may be required to eradicate odors. Always allow for proper dissipation time between cycles. Exercise caution when using ozone on items with significant elastic or rubber content. Discontinue use on rubber or elastic items if you notice degradation or weakness to the structure of the items. Do not expose safety equipment to active odor destroyers. To prevent electric shock, do not plug or unplug unit with wet hands. Do not disassemble or insert items into unit. Doing so may cause damage or electric shock.

If you have any questions/concerns, please visit ScentLok.com or call us at 800.315.5799

Model: OZ500 (82912-090)
Input Vol: DC12V
Voltage Range of Adaptor: 100-240V/50-60Hz
Power: 15W
Output: 500mg/h
Ozone generator type: Corona